

EVOLUTION COVER CONTROL® PLUS

COVERED ACTIVATION FOOD WASTE DISPOSER
TRITURADOR DE DESPERDICIOS DE ALIMENTOS ACTIVADO POR TAPÓN



BROYEUR DE DÉCHETS À ACTIVATION COUVERTE

AnswerLine®

1-800-558-5700


www.insinkerator.com

Includes/Incluye/Comprend

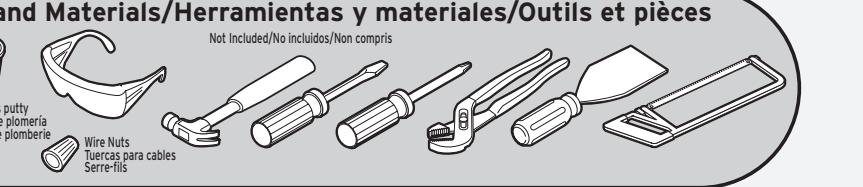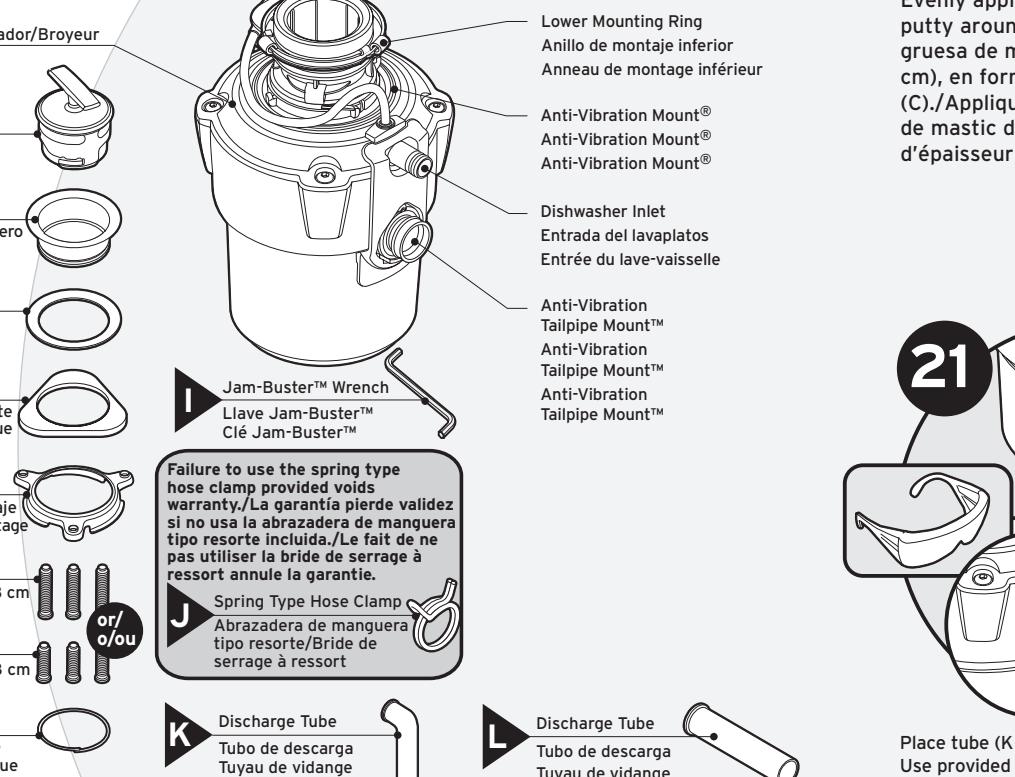

77084 Rev C

Installation Instructions/Instrucciones de Instalación/Instructions d'installation

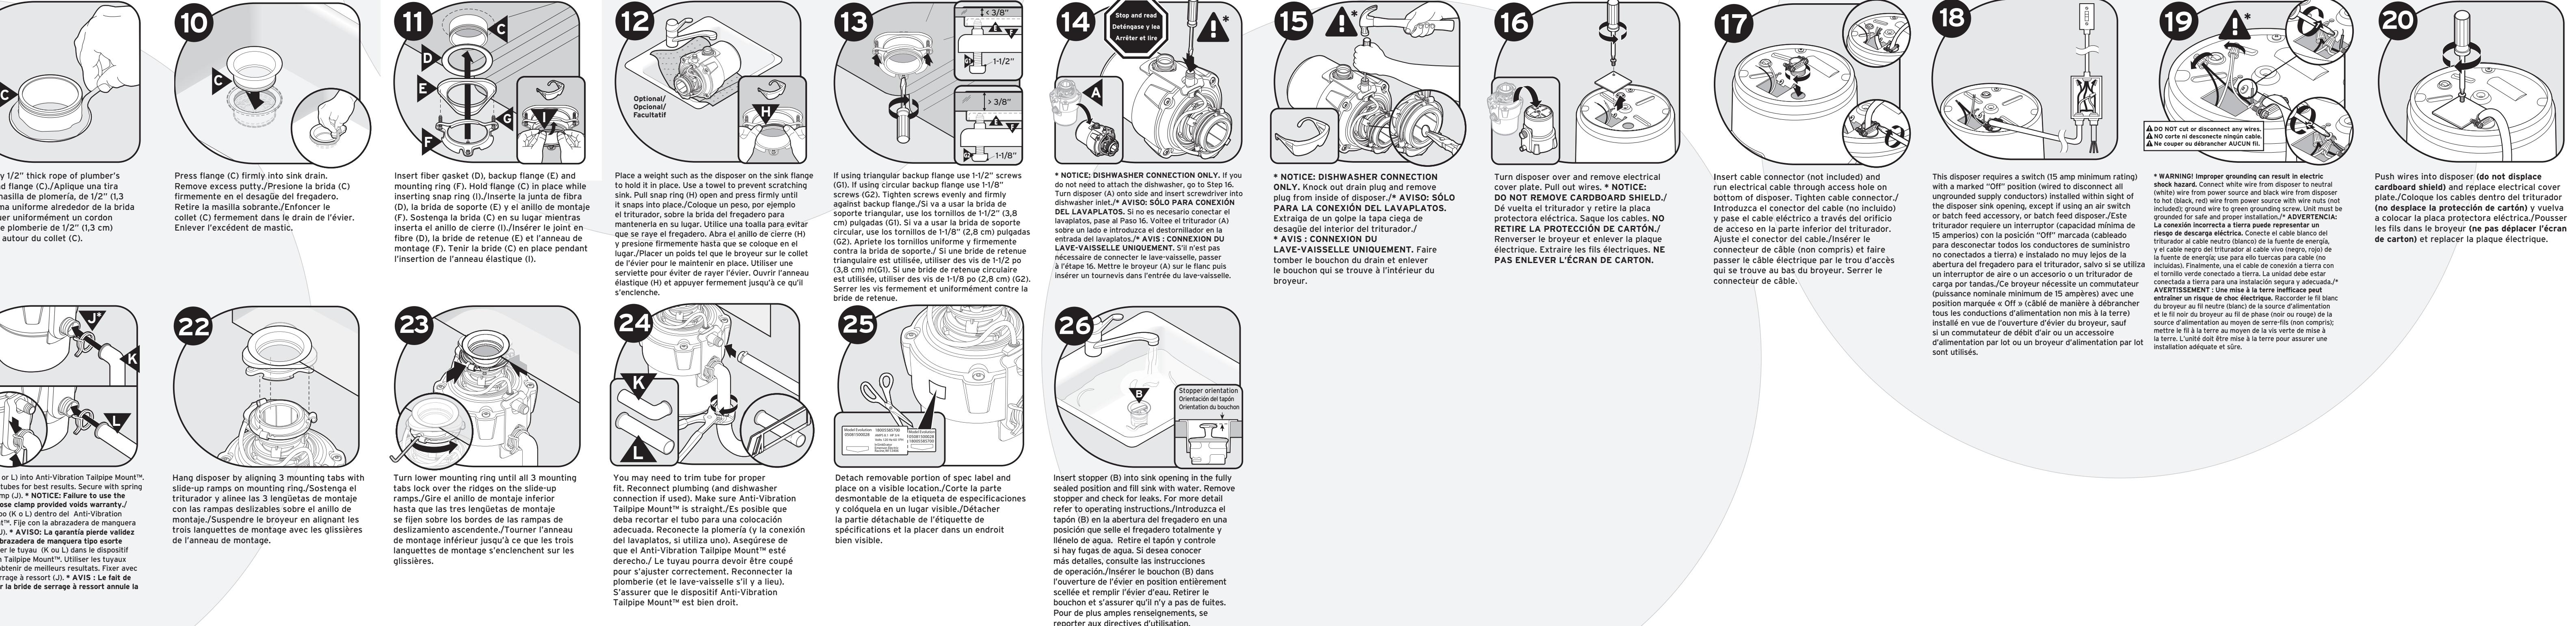

Evolution Cover Control® Plus

Covered Activation Food Waste Disposer/Triturador de Desperdicios de Alimentos Activado por Tapón/Broyeur de Déchets À Activation Couverte

OPERATING INSTRUCTIONS INSTRUCCIONES DE OPERACION MODE D'EMPLOI

ENGLISH

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Personal injury: Do not position your head or body under disposer; unit could fall during removal or installation.

GROUNDBING INSTRUCTIONS

For all grounded, cord-connected disposers:

This disposer must be grounded to reduce the risk of electric shock in the event of a malfunction or breakdown.

Grounding provides a path of least resistance for electric current. This disposer is equipped with a cord having an equipment-grounding conductor and a grounding plug.

The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

For permanently connected disposers:

This disposer must be connected to a grounded, metal, permanent wiring system; or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the disposer.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the disposer is properly grounded. If the plug provided with the disposer does not fit the outlet, do not modify the plug or attempt to force the plug into the outlet; have a proper outlet installed by a qualified electrician.

This disposer must be properly grounded. • Do not attach ground wire to gas supply line. • Disconnect power before installing or servicing disposer.

- If three-prong grounded plug is used, plug must be inserted into three-hole grounded receptacle.
- All wiring must comply with local electrical codes.
- Do not connect electrical current at main service panel until proper grounds are installed.

NOTICE

- Do not use plumber's putty on any other disposer connection other than sink flange. Do not thread sealants or pipe dope. These may harm disposer and cause property damage.
- Do not operate disposer without Anti-Vibration Tailpipe Mount™ as water leaks may result.

USER-MAINTENANCE INSTRUCTIONS

CLEANING DISPOSER

Over time, food particles may accumulate in the grind chamber and baffle. An odor from the disposer is usually a sign of food buildup. To clean disposer:


1. Place stopper in sink opening and fill sink halfway with warm water.
2. Mix 1/4 cup baking soda with water. Turn disposer on to wash away loose particles.
3. Stopper may be cleaned by hand or in dishwasher.

NOTE: Magnets in stopper can attract shavings from steel wool pads, use tape to remove.

RELEASING DISPOSER JAM

If motor stops while disposer is operating, disposer may be jammed. To release jam:

1. Turn off disposer and water.
2. Insert one end of self-service Jam-Buster™ Wrench into center hole on bottom of disposer (see Figure D). Work Jam-Buster™ Wrench back and forth until it turns one full revolution. Remove Jam-Buster™ Wrench.
3. Reach into disposer with tongs and remove object(s). Allow disposer motor to cool for 3 - 5 minutes, then lightly push red reset button on disposer bottom (see Figure E). (If motor remains inoperative, check service panel for tripped circuit breakers or blown fuses.)

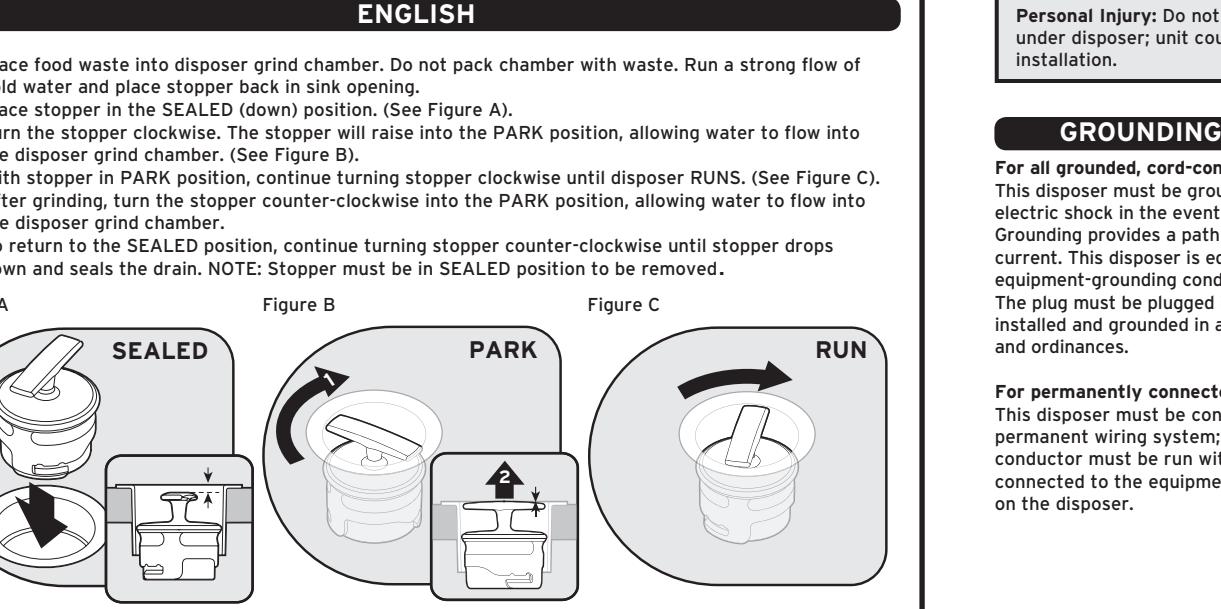

ESPAÑOL

1. Coloque los desperdicios de comida en la cámara de trituración del triturador. Tenga cuidado de que la cámara no quede llena de residuos. Deje circular un buen volumen de agua fría y coloque el tapón nuevamente en la abertura del fregadero.


2. Coloque el tapón en el sentido de las agujas del reloj. (Ver Figura A).

3. Gire el tapón en la posición PARK (detenido), para permitir que el agua circule hacia la cámara de trituración del triturador. (Ver Figura B).

4. Con el tapón en la posición PARK (detenido), siga girándolo en el sentido de las agujas del reloj hasta la posición RUN (en funcionamiento). (Ver Figura C).

5. Dejar que el triturador gire el tapón en la posición PARK (detenido), para permitir que el agua circule hacia la cámara de trituración del triturador.

6. Para volver a la posición SEALED (sellado), siga girando el tapón en el sentido contrario a las agujas del reloj hasta que caiga y se le drene. NOTA: El tapón debe estar en posición SEALED (sellado) para retirallo.

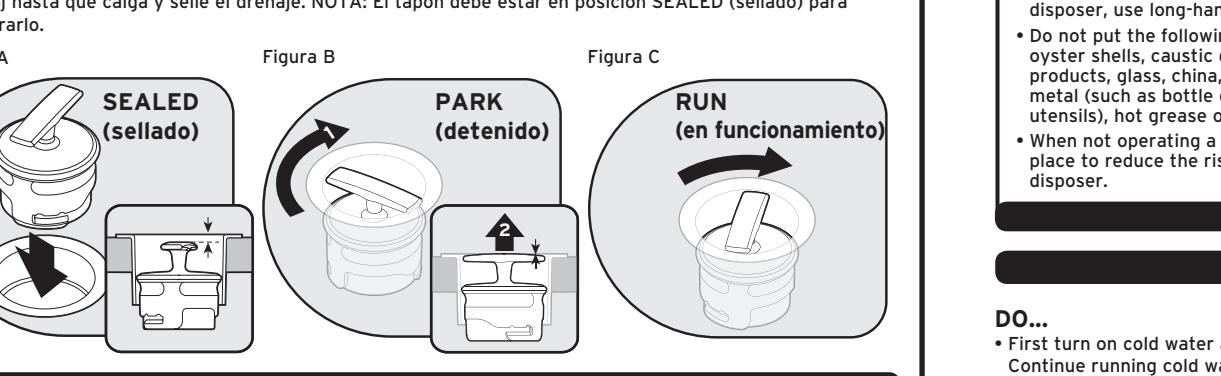

FRANÇAIS

1. Placer les déchets alimentaires dans la cuve de broyage du broyeur. Prenez garde que la cuve ne soit pas pleine de résidus. Laissez tourner un bon volume d'eau froide et remettez le bouchon dans l'ouverture du lave-vaisselle.

2. Placer le bouchon en position SCELLÉE (vers le bas). (Se reporter à la Figure A.)

3. Tourner le bouchon dans le sens horaire. Le bouchon se soulevera en position ARRÊT pour laisser l'eau s'écouler dans la cuve de broyage du broyeur. (Se reporter à la Figure B.)

4. Avec le bouchon en position ARRÊT, continuer de le tourner dans le sens horaire jusqu'à ce que le broyeur se mette en MARCHE. (Se reporter à la Figure C.)

5. Après le broyeur, tourner le bouchon dans le sens antihoraire jusqu'à la position d'ARRÊT pour laisser l'eau s'écouler dans la cuve de broyage du broyeur.

6. Pour revenir à la position SCELLÉE, continuer à tourner le bouchon dans le sens antihoraire jusqu'à ce qu'il s'enfonce et se draine.

REMARQUE: Le bouchon doit être en position SCELLÉE pour l'enlever.

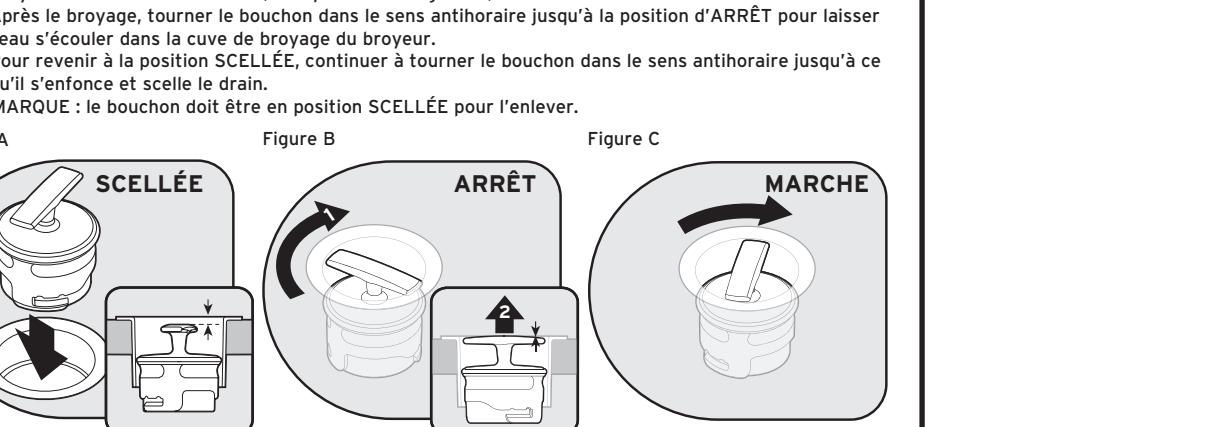


Figure A

Figure B

Figure C

Figure A

Figure B

<p