

LED DISK LIGHT

1/14




QUESTIONS OR CONCERNS CONTACT CANARM AT:
 1-800-265-1833 (English) / 1-800-567-2513 (French)
 Monday through Friday 8:00 AM to 5:00 PM E.S.T.

LED-SM4DL




TOOLS AND MATERIALS REQUIRED:

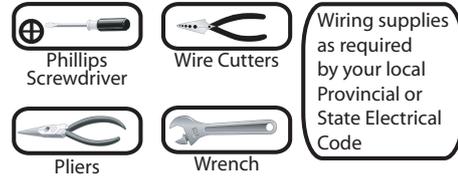

SAFETY PRECAUTIONS:

1. **TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.**
2. **THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
3. **CAUTION - RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.**


PART	DESCRIPTION	QTY
A	LED disk light	1
B	Adaptor plate	2
C	Mounting screw	2
D	Wire nut	1
E	Adaptor plate screw	2
F	Power connector	2

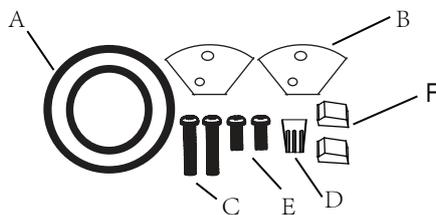

FLUSH MOUNT

This LED light is suitable to be dimmed by LEVITON# 6633, LEVITON # 6672 (1st choice), and 2nd option for LUTRON # CTCL-153PD (dimming may be adjustable by the level head at the side of the switch)

Max # of Lamps per 600W Dimmer: 6pcs

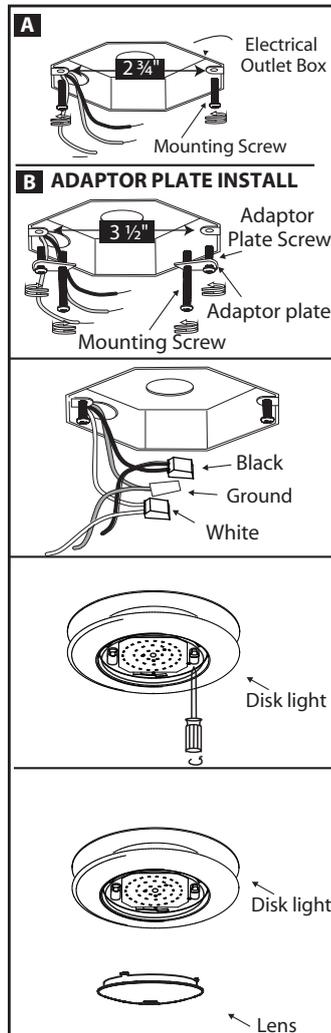

1. Prior to installation you will need to determine if the electrical box requires the adaptor plate. If the distance between the mounting screws in your electrical outlet box is greater than 2 3/4" you will need to use the adaptor plate. Securely tighten adaptor plate, with adaptor plate screws. Do not drive mounting screws completely to the end of the junction box.
2. Connect supply wires to wires on fixture with wire nuts or push wires into Quick Connector. Connect white to white, black to black, and copper wire to copper wire as grounding connection.
3. With the lens off of fixture, attach disk light to mounting screws, turn fixture clockwise to lock. Tighten screws to firmly hold the fixture in place.
4. Complete the installation by twisting the lens on the disk light.