


Installation Instructions:

Models S9350 through S9356, S9390 through S9397

1. Turn off the main power to the fixture.
2. Remove the existing lamp.
3. Cut lamp connections from lamp holder and remove ballast, capacitor, or the ignitor.
4. Connect the live wire (line hot) to the center connection of the lamp holder.
5. Connect the line neutral (common) to the external connection of the lamp holder.
6. Insert and screw in the Hi-Pro LED lamp.
7. Turn the main power back on, the fixture is ready to use.

Wire diagram:

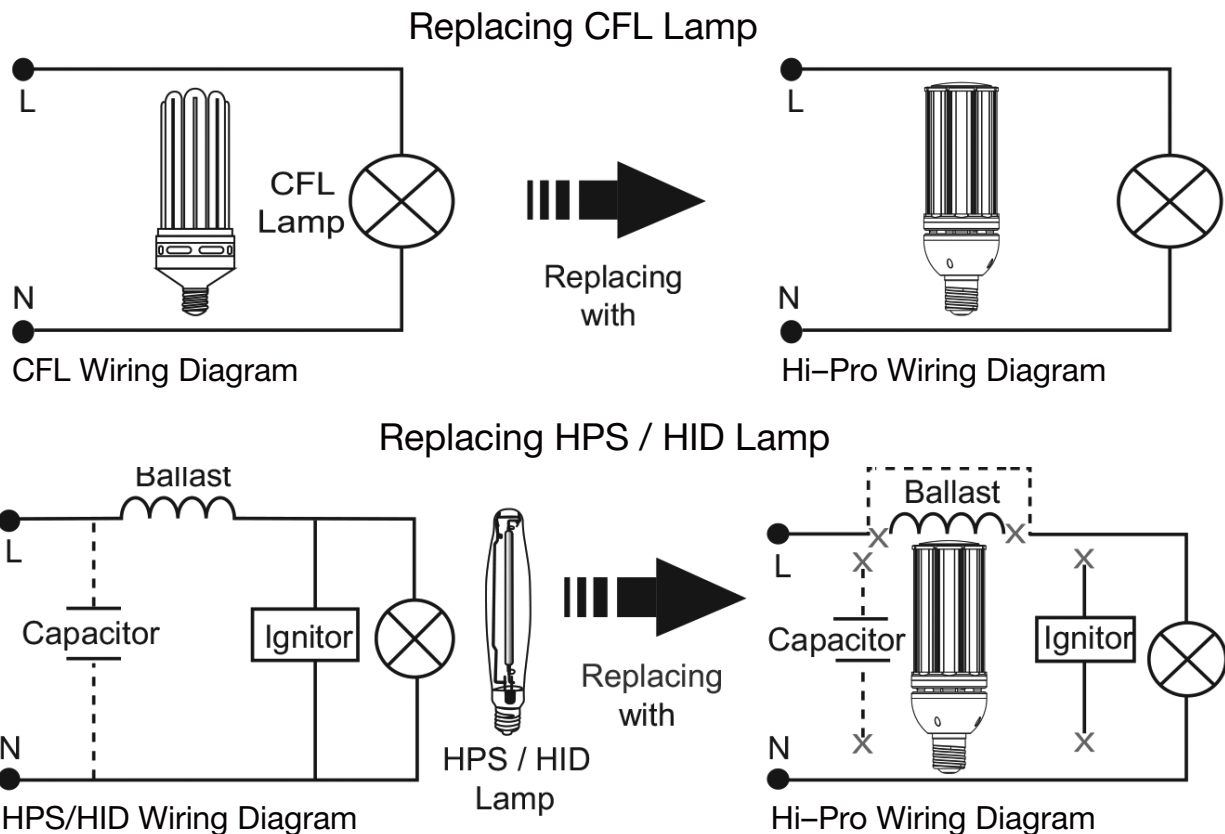

Warning: Disable all power to the Luminaire. The lamp holder must be disconnected from the wiring to the ballast, capacitor, or ignitor. Verify that voltage does not exceed 277V AC. Please see "Wiring Diagram". Failure to follow instructions can result in a damaged product and will void warranty. It could also result in an electric shock, or fire.