


Instructions:

1. Insert strainer body and large seal washer down through sink hole. Hold firmly and assemble galvanized housing and lock-nut from underside. Tighten firmly.

Note: Use large seal washer; no putty or sealing compound necessary.

2. Make waste hookup with brass tailpiece, slip nut and poly washer. Poly washer fits between tailpiece and strainer body. Tighten firmly.

3. Run water and check for leaks.

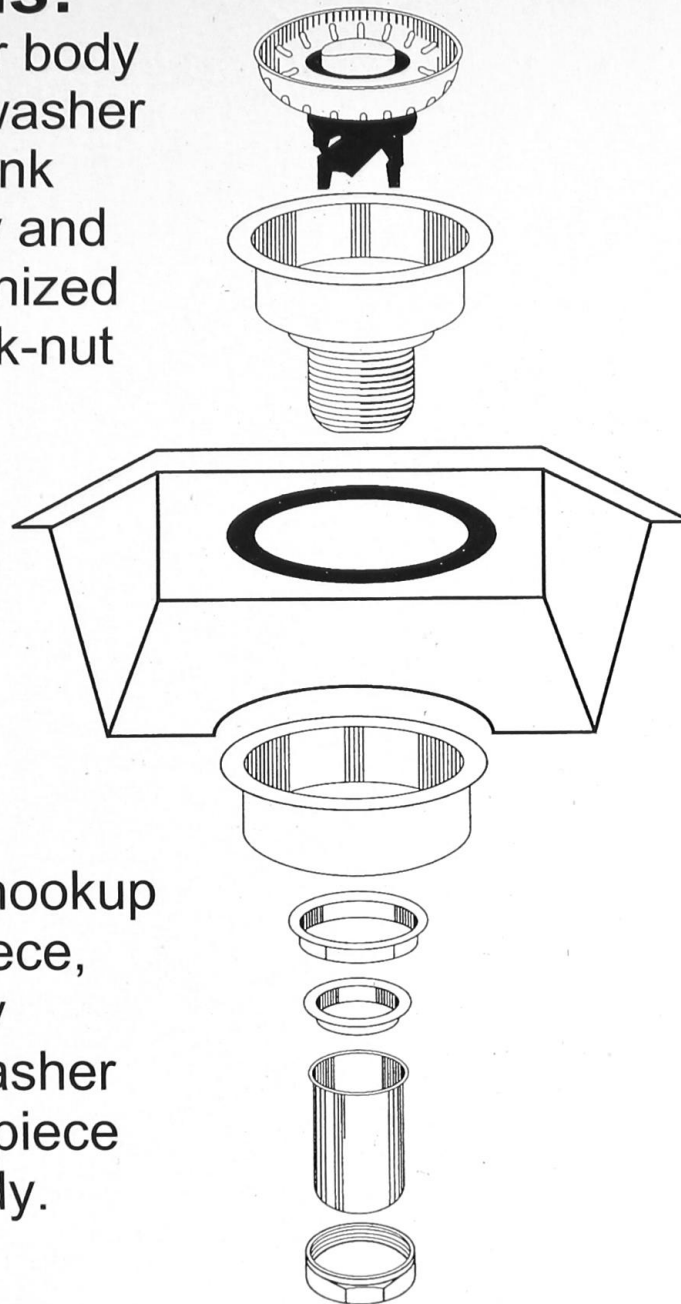

Instructions:

1. Insérer la bonde et la grande rondelle dans le trou de l'évier. Les maintenir fermement en vissant par en-dessous le corps galvanisé et l'écrou de blocage. Bien serrer.

Remarque: Utiliser la grande rondelle. Aucun mastic ou composé de scellement nécessaire.

2. Effectuer le raccordement au tuyau d'évacuation à l'aide du corps de laiton, de l'écrou et de la rondelle de plastique doit être placée entre l'anneau de la bonde et le corps. Serrer à fond.

3. Faire couler l'eau pour détecter les fuites.