



Wax Free Toilet Seal Installation

The quick, clean and easy way to install a toilet!

1. CLEAN TOILET HORN

- a. Remove old wax with a putty knife
- b. Clean away any remaining wax
- c. Use Rubbing Alcohol on a towel or rag to remove any remaining wax
- d. Dry surface completely before installing your new Fernco Wax Free Toilet Seal



2. PEEL PROTECTIVE SEAL

3. STICK TO BOTTOM OF TOILET

Firmly press the Fernco Wax Free Toilet Seal over the horn on the bottom of the toilet, ensuring that ALL of the adhesive is in contact with the bottom of the toilet

4. INSTALL TOILET

To ease installation, lubricate the flexible ribs with soapy water. Align the Fernco Wax Free Toilet Seal with the floor drain and the toilet flange bolts and lower into desired position. There should be some resistance and YOU SHOULD FEEL THE SEAL as the flexible ribs compress against the inside of the drain pipe. Secure toilet and check for leaks.

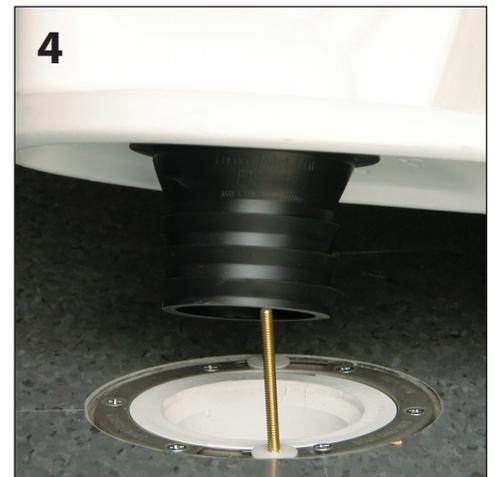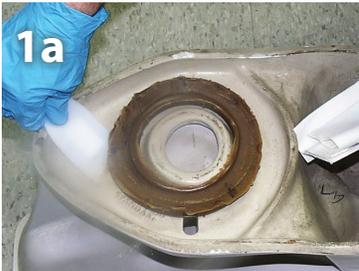

United States
PH: 810-653-9626
FX: 810-653-8714

www.fernco.com

Canada
PH: 519-332-6711
FX: 519-332-8610