



Taymor **MORTISE LOCK**
INSTALLATION INSTRUCTIONS

EXPLODED DRAWING FOR LEVER TRIM WITH ESCUTCHEON PLATE


NOTE For proper installation, door must be professionally prepared using the install template provided. Suitable for 1-3/4" doors only.

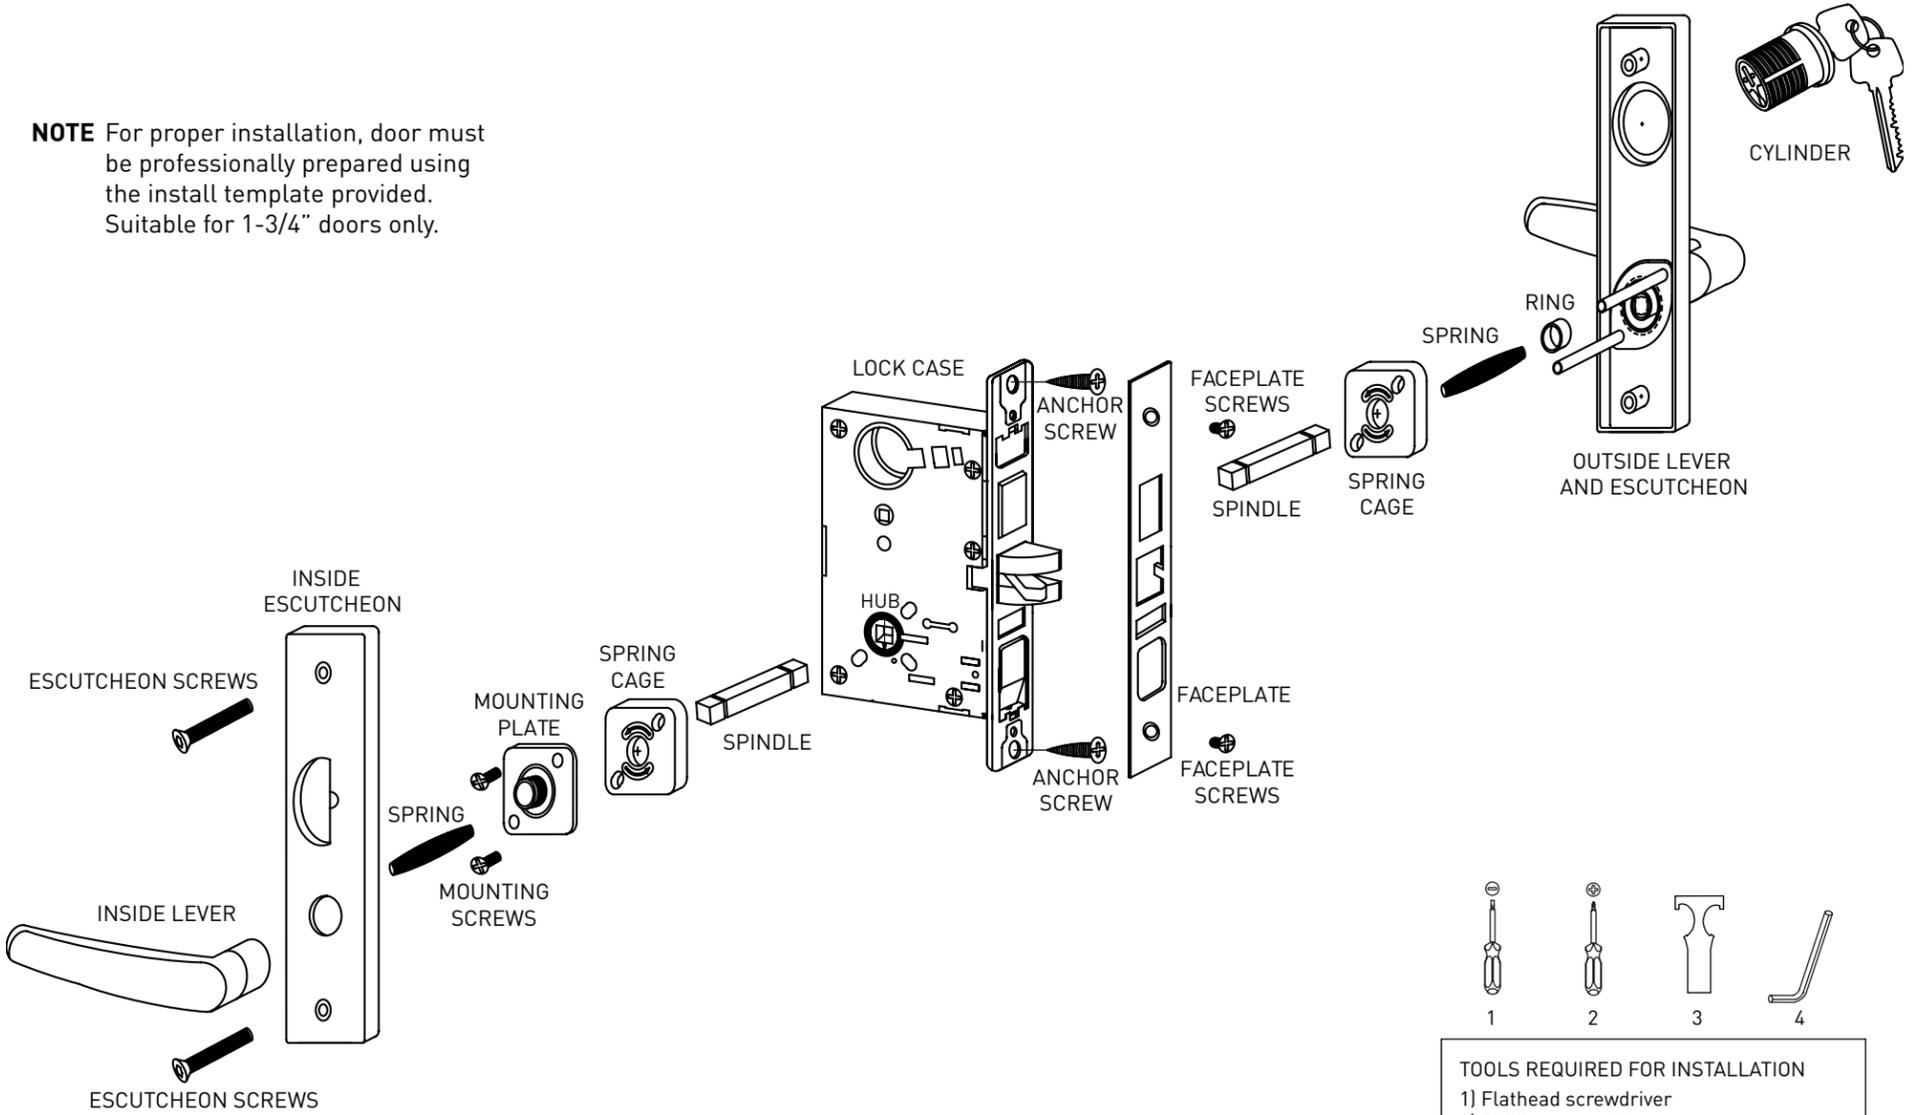

EXPLODED DRAWING FOR LEVER WITH ROSE TRIM

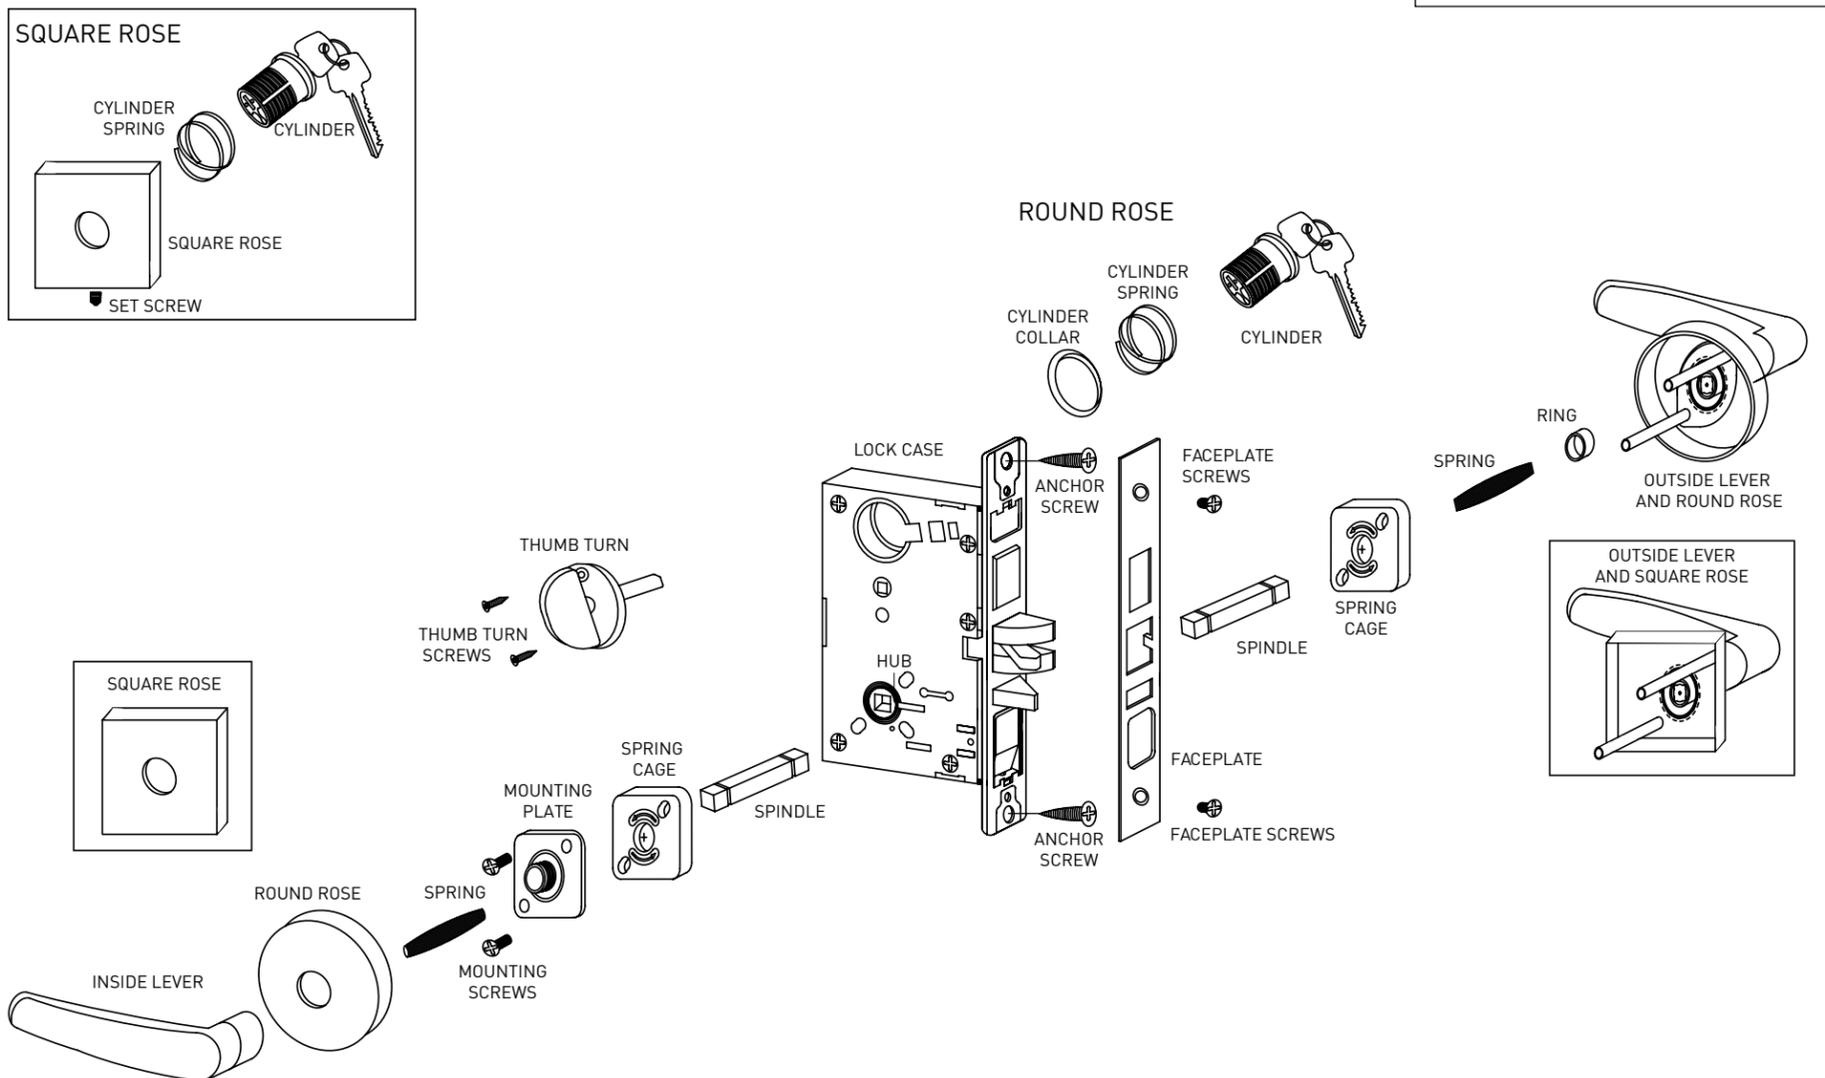

MORTISE LOCK INSTALLATION INSTRUCTIONS

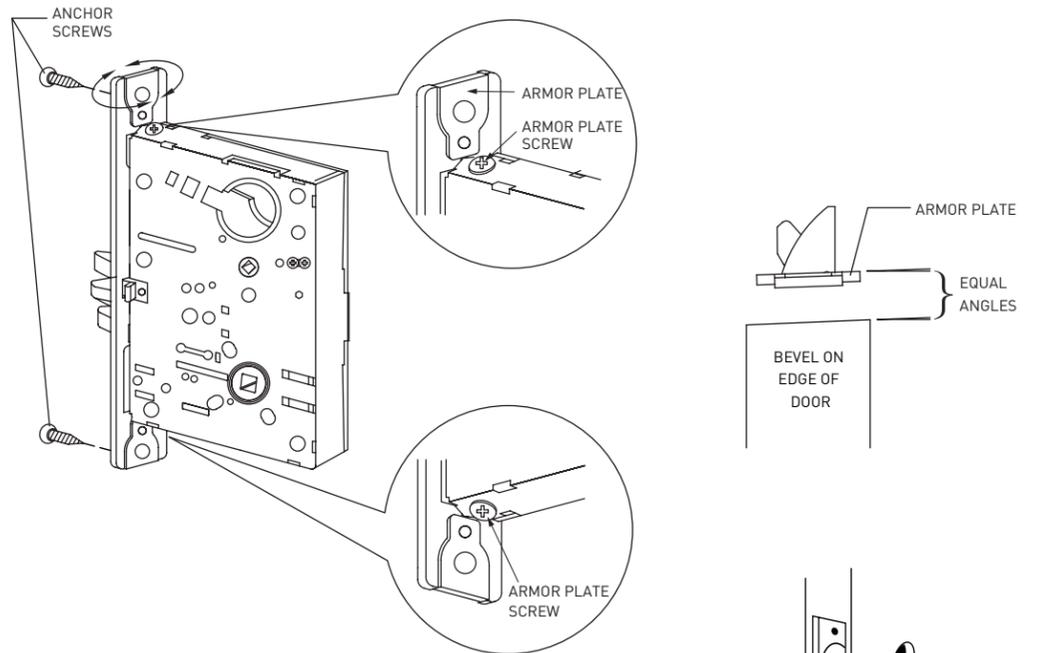

Step 1A Adjust Armor Plate for Bevel Door


- 1) Loosen top and bottom armor plate screws (machine screws).
- 2) Adjust armor plate to match door bevel.
- 3) Re-tighten top and bottom armor plate screws hand tight.

Step 1B Install Lock Case

- 1) Leave the anchor (combination) screws slightly loose to allow for adjustment.
- 2) Ensure the correct handing of the spring latch.
- 3) Refer to "How to Change Handing" instructions at the end of the instruction sheet if necessary.

Step 2 Install Outside Lever Trim (Escutcheon or Rose Trim)

- 1) Insert spring into lever.
- 2) Install the ring.
- 3) Insert spindle into hub of lock case.
- 4) Place spring cage onto outside lever assembly with arrows pointing in direction of lever rotation.
- 5) Position outside lever assembly into post holes of lock case spring cage.
- 6) Ensure lever is in horizontal position.
- 7) For Rose trim, assemble cylinder, cylinder spring, cylinder collar or square rose and then thread into the lock case.
- 8) For Escutcheon trim thread cylinder into the lock case.
- 9) Securely tighten cylinder set screw (recessed Philips head screw near top of armor plate), making sure the set screw resides within the groove of the cylinder.

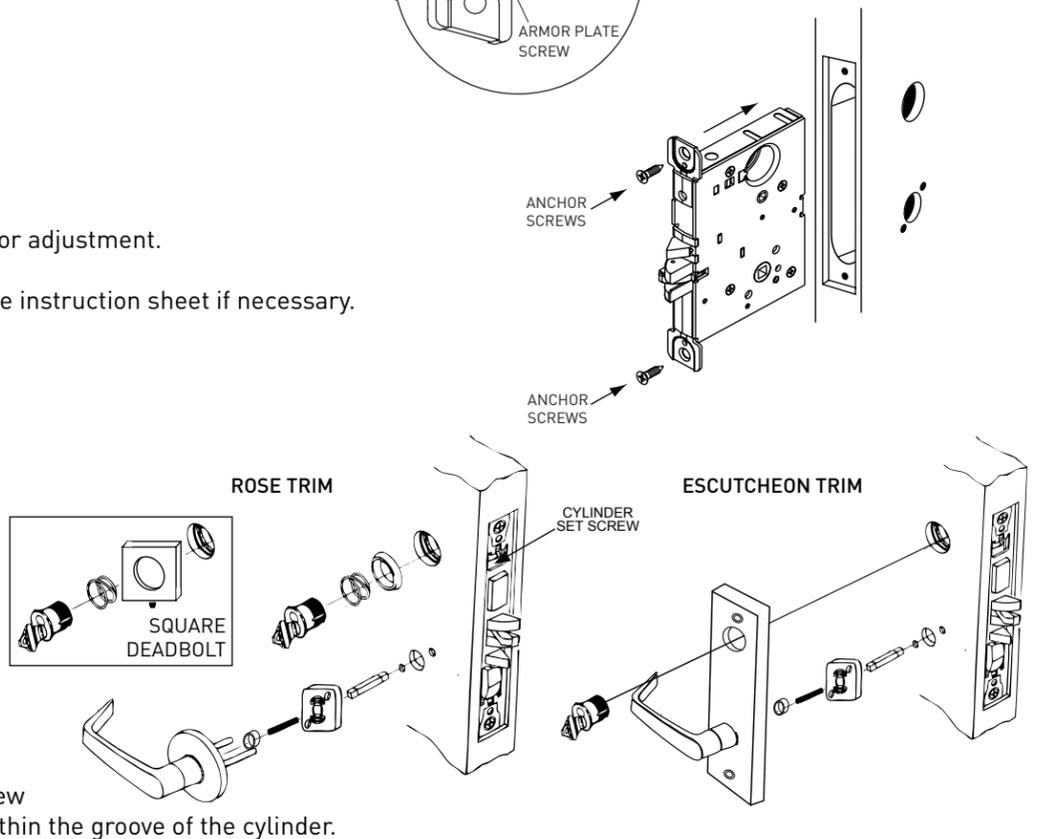


Step 3 Install Inside Lever Trim with Escutcheon Plate

- 1) Make sure the arrows on the spring cage point in the direction of lever rotation.
- 2) Slide mounting plate and spring cage over the inside spindle and fasten with two (2) mounting screws.
- 3) Insert spindle into hub of lock case.
- 4) For escutcheon with thumb turn, retract deadbolt and install thumb turn in the vertical position.
- 5) Place escutcheon over mounting plate.
- 6) Install two (2) escutcheon mounting screws.
- 7) Ensure lever is in horizontal position.
- 8) Insert inside spring into lever and tighten inside lever bushing with spanner wrench.
- 9) Test operations of all functions before closing door.


Install Inside Lever Trim with Rose Trim

- 1) Make sure the arrows on the spring cage point in the direction of lever rotation.
- 2) Slide mounting plate and spring cage over the inside spindle and fasten with two (2) mounting screws.
- 3) Insert spindle into hub of lock case.
- 4) For rose with thumb turn, retract deadbolt and install thumb turn assembly in the vertical position. Fasten with two (2) thumb turn screws.
- 5) Cap inside rose over spring mount assembly.
- 6) Ensure lever is in horizontal position.
- 7) Insert inside spring into lever and tighten inside lever bushing.
- 8) Test operations of all functions before closing door.

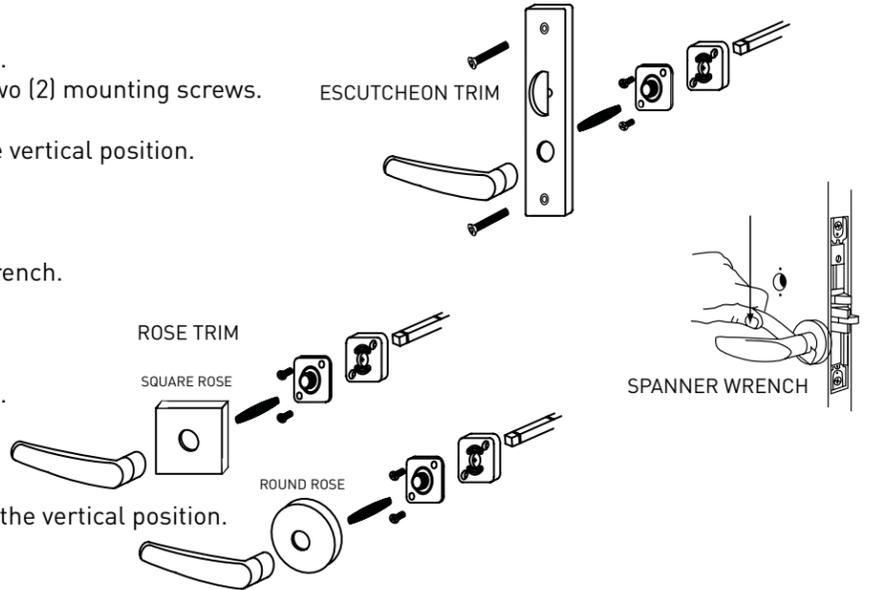


Step 4 Install Faceplate

- 1) Tighten the anchor (combination) screws until hand tight.
- 2) Place faceplate in position and install the two (2) faceplate screws (machine screws).

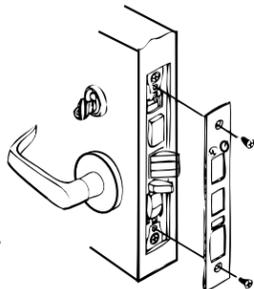

Step 5 Install Strike Plate

- 1) Fit strike plate and dust box into frame and secure into place with strike plate screws.

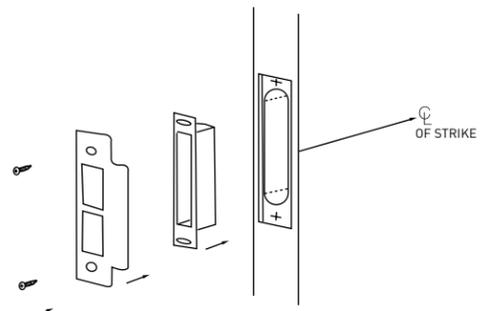

How to Change Handing

If it is necessary to change handing, please follow steps below:

- 1) Use allen key to fully unfasten the screw in the hole behind latchbolt (green label).
- 2) Pull latchbolt out of the lock case.
- 3) Rotate latchbolt to adjust handing.
- 4) Fasten the screw tightly into the hole and secure with thread locker (Loctite 242).
- 5) Use flat head screwdriver to push the locking piece (green label) towards the opposite side of the lock case until it reaches the stop position.
- 6) Handing is completely reversed.

